
Installation Dimensions & Waste Chute Location - Eccellenza Momentum

Installation Dimensions - Eccellenza Momentum

The dimensions below are the overall dimensions of the Eccellenza Momentum. You must leave an additional 2"each side and behind the machine for ventilating, for the water fitting and the for power switch access.

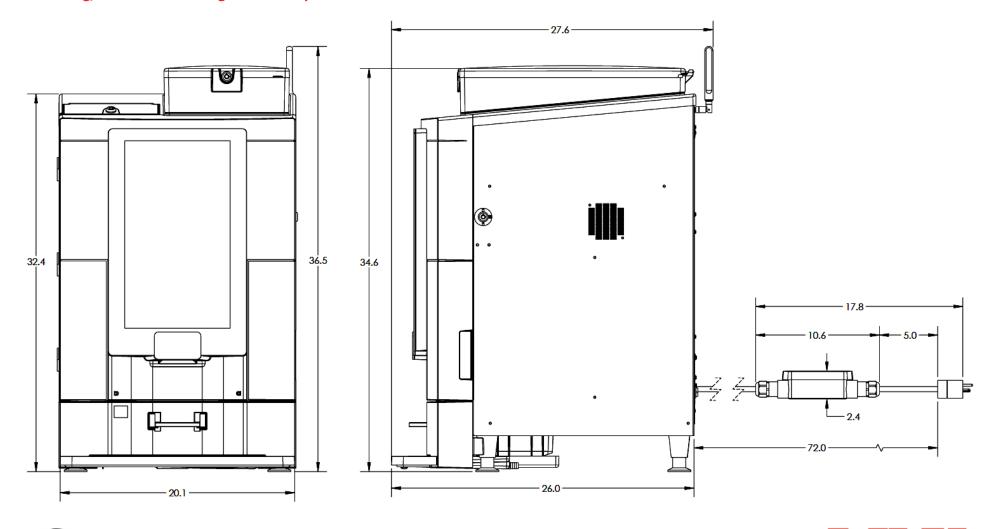



Installation Dimensions & Waste Chute Location - Eccellenza Momentum -

larger.

Cocellenza Installation Dimensions - Eccellenza Momentum The dimensions below are the overall dimensions of the Eccellenza Momentum. You must leave an additional 2"each side and behind the machine for ventilating, for the water fitting and the for power switch access. **REAR AC Power** Cord - 2.06 GFCI must be accessible for reset

