


KEURIG (KDP) MOMENTUM & TOUCH FILTER INSTALLATION GUIDE

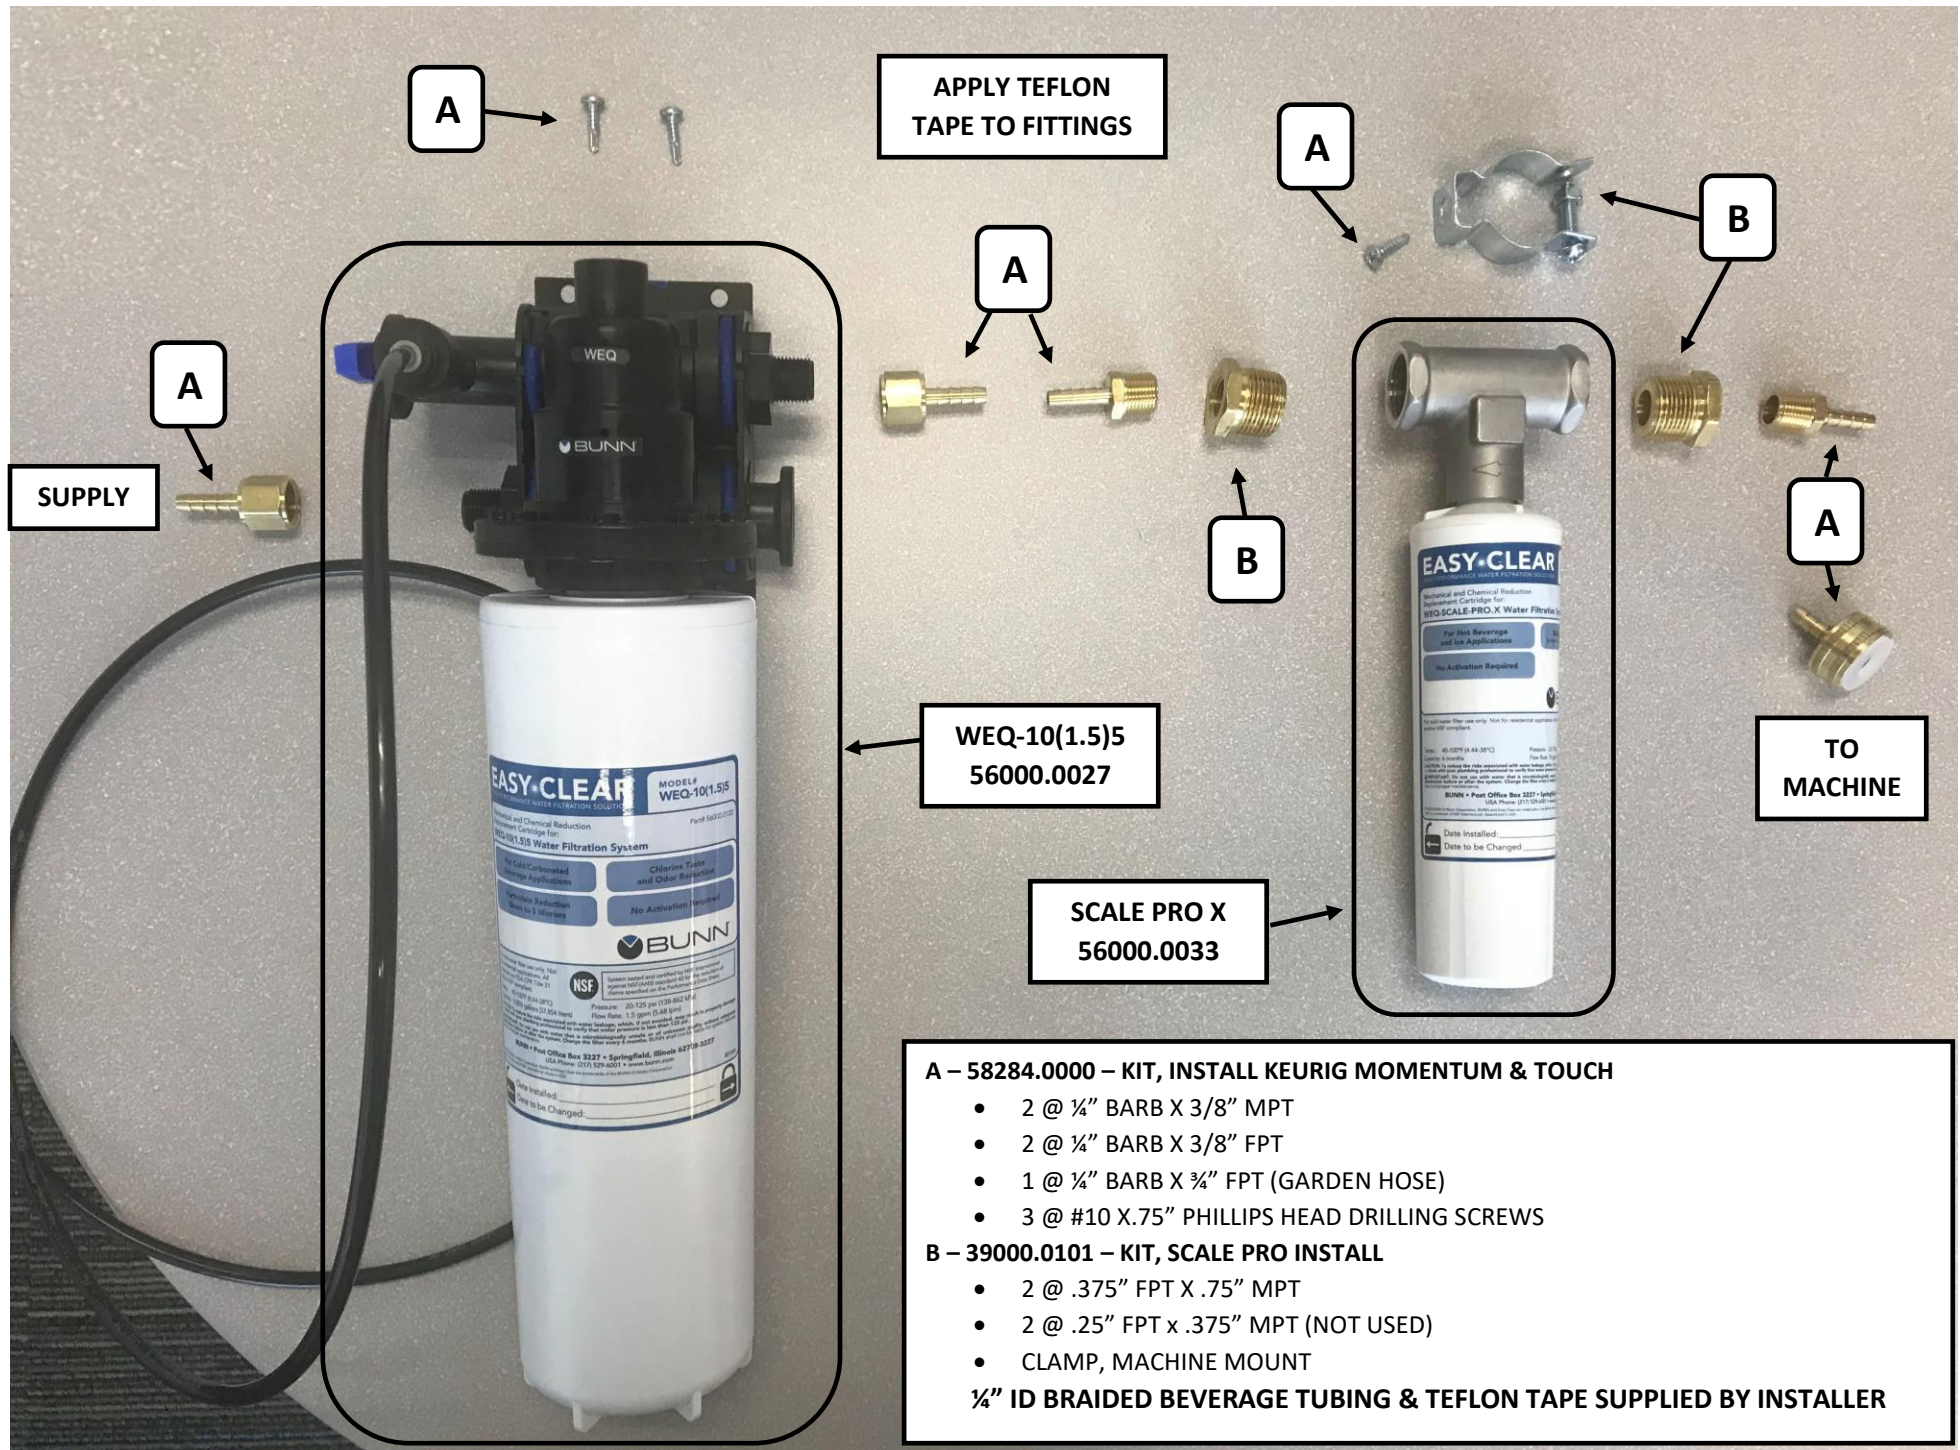

A – 58284.0000 – KIT, INSTALL KEURIG MOMENTUM & TOUCH

- 2 @ 1/4" BARB X 3/8" MPT
- 2 @ 1/4" BARB X 3/8" FPT
- 1 @ 1/4" BARB X 3/4" FPT (GARDEN HOSE)
- 3 @ #10 X.75" PHILLIPS HEAD DRILLING SCREWS

B – 39000.0101 – KIT, SCALE PRO INSTALL

- 2 @ .375" FPT X .75" MPT
- 2 @ .25" FPT x .375" MPT (NOT USED)
- CLAMP, MACHINE MOUNT

1/4" ID BRAIDED BEVERAGE TUBING & TEFLON TAPE SUPPLIED BY INSTALLER